


# PRISMA

## MICRO

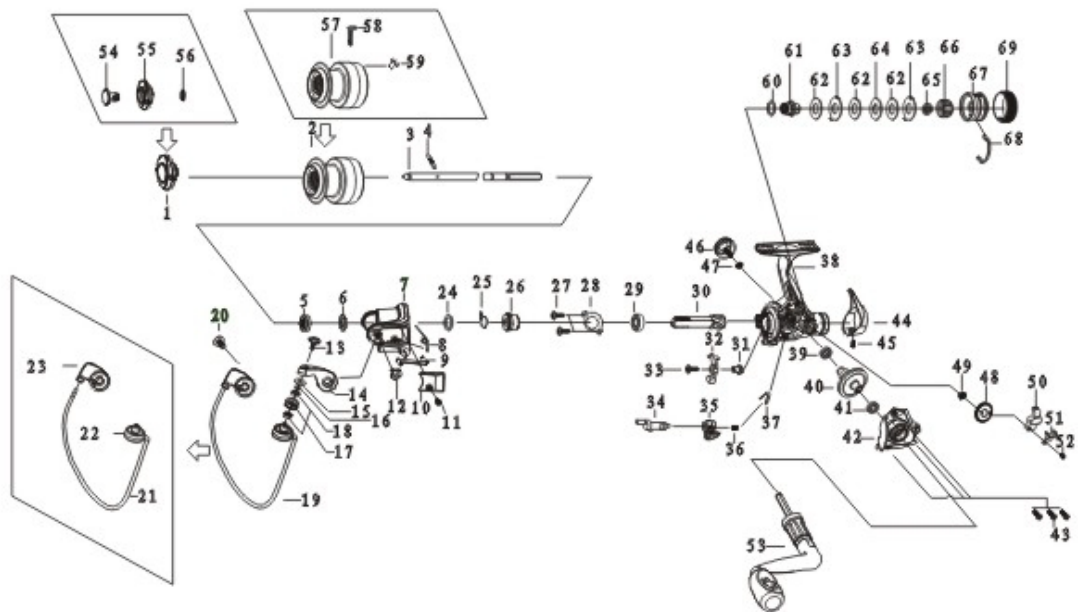

- 1 drag knob assembly
- 2 spool assembly
- 3 main shaft
- 4 main shaft pin
- 5 pinion gear nut
- 6 rotor washer
- 7 rotor
- 8 ball arm spring
- 9 kick lever
- 10 ball arm cover
- 11 ball arm cover screw
- 12 ball arm screw
- 13 line roller screw
- 14 ball arm
- 15 line roller bushing
- 16 line roller washer
- 17 line roller ball bearing
- 18 line roller
- 19 ball arm assembly
- 20 ball holder screw
- 21 ball arm
- 22 line roller
- 23 ball holder
- 24 rotor washer
- 25 silent spring
- 26 silent collar
- 27 pinion gear screw
- 28 ball bearing fixed board
- 29 pinion gear ball bearing
- 30 pinion gear
- 31 anti-reverse pawl bushing
- 32 anti-reverse pawl

- 33 anti-reverse pawl screw
- 34 anti-reverse shaft
- 35 anti-reverse switch
- 36 anti-reverse screw
- 37 anti-reverse spring
- 38 body
- 39 body ball bearing
- 40 pinion gear
- 41 body cover ball bearing
- 42 body cover
- 43 body cover screw
- 44 body back decorated cover
- 45 back decorated cover screw
- 46 handle cap washer
- 47 handle cap washer
- 48 oscillating gear
- 49 oscillating gear ball bearing
- 50 oscillating slide
- 51 oscillating slide retainer
- 52 oscillating slide screw
- 53 handle assembly
- 54 drag knob
- 55 spool cover
- 56 drag retainer
- 57 spool
- 58 line hook
- 59 line hook bras needle
- 60 spool click gear
- 61 reared drag click washer

- 62 drag washer
- 63 eared washer
- 64 key washer
- 65 drag spring
- 66 drag screw
- 67 rear drag knob
- 68 rear drag retainer
- 69 decorated ring